 


Nook HD

Barnes and Noble Tablet
Quick Reference Guide

One on One Appointments are available and they are FREE!! Call Beth 260-244-5541 to schedule a free appointment today!!

Charging Your Nook HD

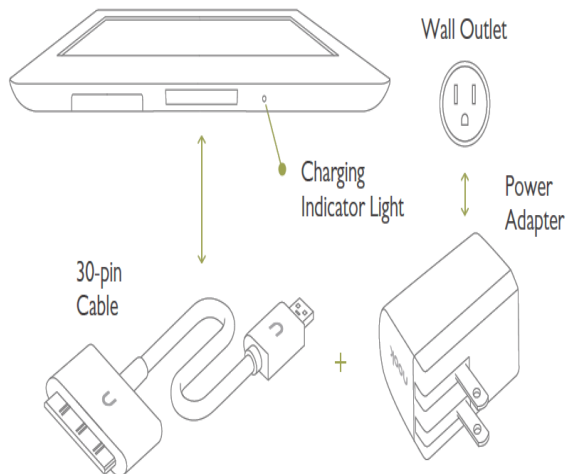

You must charge your NOOK before using it the first time.

 
Plug your NOOK into a wall outlet using the Power Adapter and 30-pin Cable included with your device.

You can use your NOOK while it charges.

The charging indicator light on the bottom of your device will show orange when charging and will turn green when the battery is full. It takes approximately 3 hours to charge your NOOK.


Note: To charge your NOOK, you must plug it into a wall outlet. Your NOOK will not charge when connected to a computer.

Connecting To WIFI

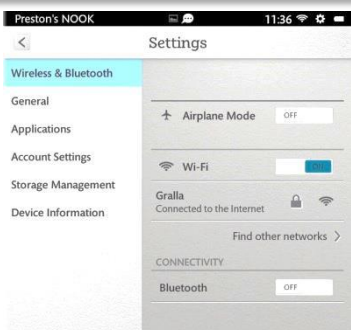

Connecting your Nook HD to WIFI is done through your settings. Just like other tablets you want to make sure the WIFI is turned on and you have selected the WIFI network in the area you are trying to retrieve. Once connected you should not need to reconnect each time you come to a location where you have access to WIFI before. It should automatically connect.

 Downloading Apps

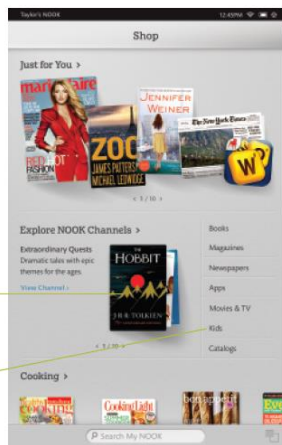

Nook Home Button



To visit the Nook store:

1. Connect to WIFI
2. Press the Nook Button to display your Home Screen.
3. Tap the shop Icon
4. Swipe to scroll through Channels and categories
5. Search the Nook store, tap to display an on-screen keyboard
6. Once your Barnes and Noble account is set-up, you can make purchases with a tap of a finger

Nook HD

 
Barnes and Noble Tablet
Quick Reference Guide

Peabody Public Library
1160 E State Road 205
Columbia City, IN 46725
260-244-5541



Your Android Hardware

Buttons

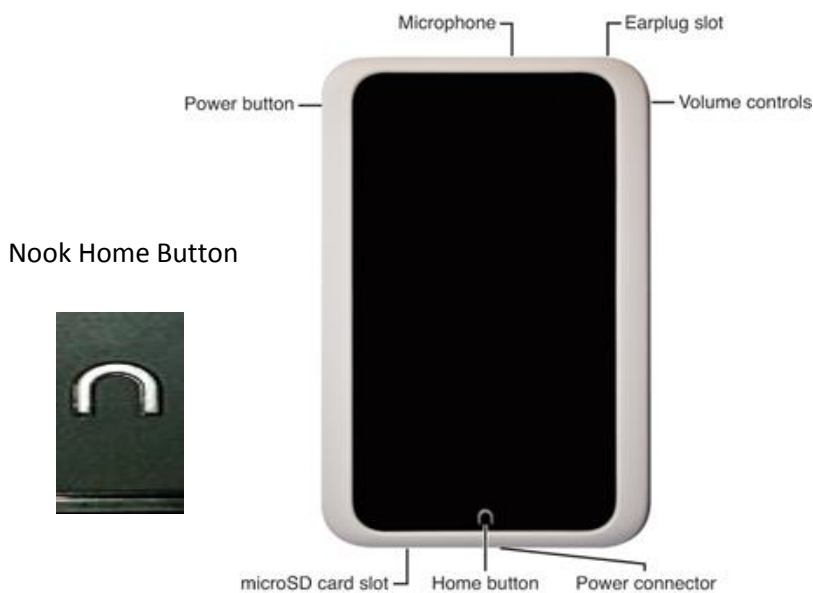

Power Button – Press and hold the power button for about 2 seconds to turn off your Nook. Press and hold to turn on.

Microphone – This allows you to speak and your Nook can recognize it.

Earplug Slot – Listen to your book or apps by plugging in your Ear buds.

Volume Controls – to make sounds louder and quiet

Micro SD Card Slot – Give your Nook More Memory by inserting a memory card.

Home Button – Takes you back to the main screen whenever you need to go.

Power Connector – Used for charging your unit or connecting it to a PC.

Home Screen Apps, Notifications, and Quick Access



Navigation Buttons

Status Bar – Indicates the time and icons for battery status, WIFI, Short settings, and Notifications

Nook Tray – Check for daily updates, weather, and new ideas to read

Active Shelf – Holds books, magazines, movies, etc. You can move back and forth on the active shelf.

Recent Drawer – View recently opened books and other items. See recently used apps.

Nook Button – This takes you back to the home screen anytime.

Home screen – holds all the home features within it.

Search box – allows you to search within your Nook

Quick Corner – Gives quick descriptions of items you are accessing.

Navigation Buttons – Tap the Nav. Buttons on your home screen to open various features on your Nook, such as:

- Library
- Apps
- Web
- Email
- Shops

