

Kindle Fire


Typical Guide For Kindle Fire and Kindle Fire HD

Quick Reference Guide



One on One Appointments are available and they are FREE!! Call Beth 260-244-5541 to schedule a free appointment today!!

Charging Your Kindle

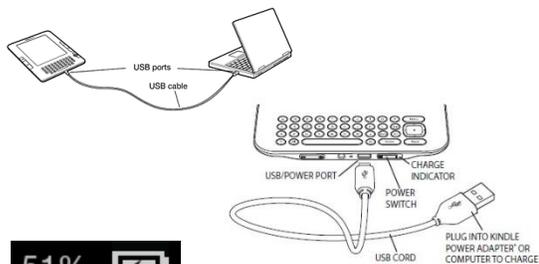

51%

Note* Turn off programs you are not using to save battery life.

1. Connect your USB cable to a compatible power adapter and your Kindle Fire. Plug the power adapter into a power outlet.
2. On your Kindle Fire, swipe down from the top of the screen to show **Quick Settings**, and then tap **More**.
3. Tap **Device**.
4. Next to **Battery Remaining**, you should see (Charging) if your Kindle Fire is charging properly
5. You can also charge using your computer
6. In Quick Settings you can show battery Percentage

Connecting To WiFi



1. Tap the Quick Settings icon in the top right hand corner of the Home screen. Or Swipe down from the top.
2. Select Wi-Fi.
3. Ensure Wireless Networking switch is in the on position.
4. Tap the name of the network you wish to connect to from the list of available networks.

Downloading Apps




amazon.com
Prime



1. You'll find the Free App of the Day, best sellers and other featured apps on the Amazon Appstore home page. You can search for apps by entering a search term in the search bar.
2. Once you've found the app you'd like to purchase, tap the orange price button and select **Buy App** or **Get App**. Your default 1-Click payment method will be charged automatically (unless the app is free). Tap **Open** to launch the app after downloading it.
3. Check the Carousel for your download and maintains apps from there also

Notifications

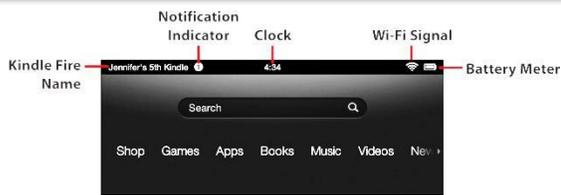

Your Kindle Fire uses the notification indicator to inform you of the status of background tasks and let you know when you've received e-mail. When you see the notification indicator, you can tap it to get more information.

1. Swipe the status bar downward to open the notifications.
2. Tap a notification for more information or additional options

The set-up for your Kindle depending upon the version of Kindle you have may vary. Buttons, style, features, and Icons may look different. Kindle is an Android Tablet with Kindle software preinstalled on the tablet.

Kindle Fire

Typical Guide For Kindle Fire and Kindle Fire HD


Quick Reference Guide



Peabody Public Library
1160 E State Road 205
Columbia City, IN 46725
260-244-5541



Your Android Hardware

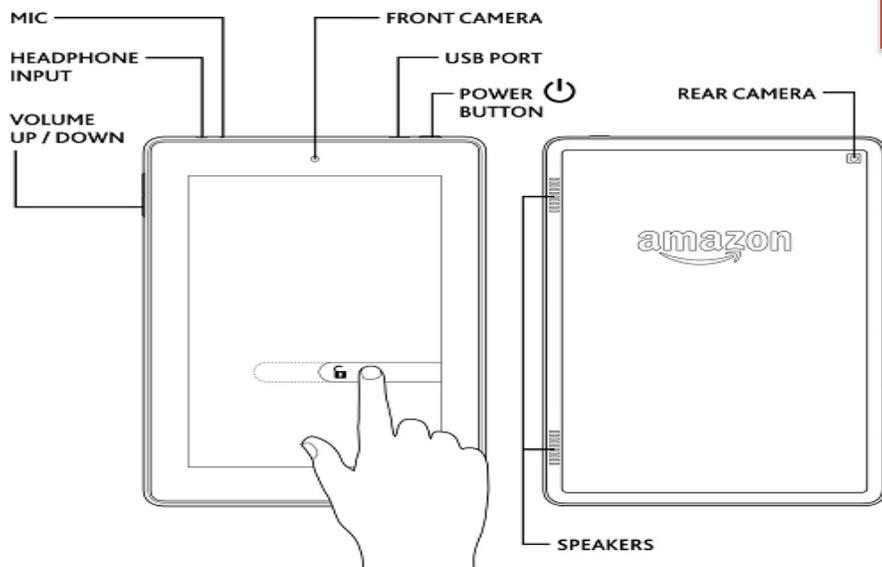

Buttons

NOTE: Not all Kindle's Have a Camera

Speakers: The top edge of your Kindle contains stereo speakers to listen to music, movies, audiobooks, and more on your Kindle.

Headphone jack: Plug in headphones to listen to audio content on your Kindle. Attaching headphones turns off the built-in speakers.

USB/power port: Use for charging your Kindle and connecting it to your computer. Learn more about charging your Kindle. You can also use the USB port to transfer content between your computer and your Kindle.

Power button: To turn on your Kindle, press the power button. Press and swipe the orange ribbon to the left to start using your Kindle Fire.


Camera: Allows you to capture moments

**To put your Kindle in sleep mode, press and release the power button. If you need to turn off the Kindle completely, such as when traveling on an airplane, press and hold the power button for seven seconds until the screen goes blank. If your Kindle does not power on or is unresponsive during use, you can do a hard restart by pressing and holding the power button for 20 seconds. The power button has a charge indicator light that is orange when your Kindle is charging and will turn off when the battery is fully charged.

Home Screen Apps



• **Home** - Tap the Home icon to go to the Home screen from anywhere on your Kindle.

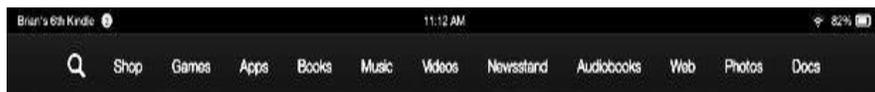


• **Content Libraries** - The Home screen on your Kindle Fire contains content libraries where you'll access your books, games, videos, and other content. Tap a library to open it. Runs along the top of the Home Screen



• **Carousel** - The Carousel holds your most recently used books, videos, music, apps, and more. To remove an item from the Carousel, press and hold, and then tap Remove from Carousel.



• **Settings** - Swipe down from the top of the screen to show Quick Settings to manage Wi-Fi, brightness, and other settings.

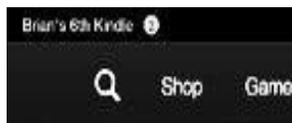

• **Search** - In the Search bar at the top of the screen, type search words, and then tap Libraries, Stores, or Web to search for your items, shop for items, or search the web.



• **Favorites** - Tap the Favorites icon from Home to view apps and content you've marked as your favorites. To mark your content as a favorite, press and hold the item, and then tap Add to Favorites.

Touch Screen Actions

Swipe: Swipe your finger across the screen to turn pages, or scroll up or down within a screen

Tap: Tap to select buttons or text, and to enter your selections using the onscreen keyboard.

Turning pages: Tap the left side of the screen to return to the previous page in your reading material. Tap the right side of the screen to continue to the next page in your reading material.

Zooming in on images: Use your thumb and index finger expand an image, or to pinch it to a smaller size.